




Driveway Application  
Balmoral Auckland  
Laid in December 2013

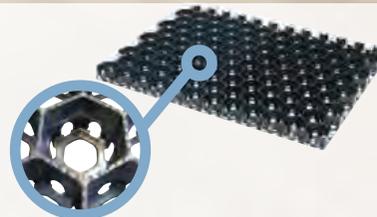

**JakMatGeocell** *The sustainable driveway and paving alternative*

## JakMat Preparation for Driveway Application



1. Remove overburden as much as possible to form an even surface.

2. Lay a sub base of 100mm GAP20. Compact down before laying interlocking mats together.



3. JakMats filled with pebbles as chosen decorative aggregate.



4. Allow 10 -15ml excess for total cover and settlement.



**Jakaar**  
Re:Inventing Plastics

Jakaar Industries Ltd  
66 Cryers Rd, Highbrook, Manukau 2013  
PO Box 204069, Highbrook, Manukau 2161, Auckland, New Zealand  
Tel +64 9 273 5511, Fax +64 9 273 5512  
[www.jakmat.co.nz](http://www.jakmat.co.nz)

